
Trouble shooting Pac Food's VS305 vacuum sealer: Vacuuming issues

Check Hoses and Small Valve Replacement Procedures



Before commencing make sure the unit is not connected to the power.

Remove screws at either end of lid



Remove lid



Remove two screws at the front




Remove 5 screws at the rear




Lift top housing cover carefully




Lift cover; please be aware of cables connected to control board

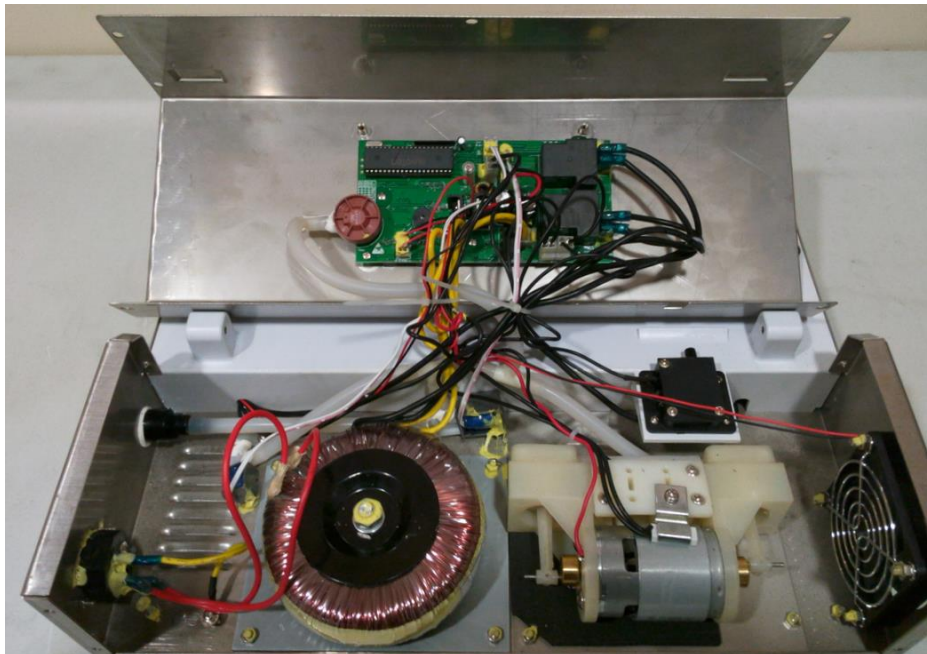


Check all hoses and connections. If there are any hoses that are disconnected please re-attach. If any connectors are damaged please contact Pac Food

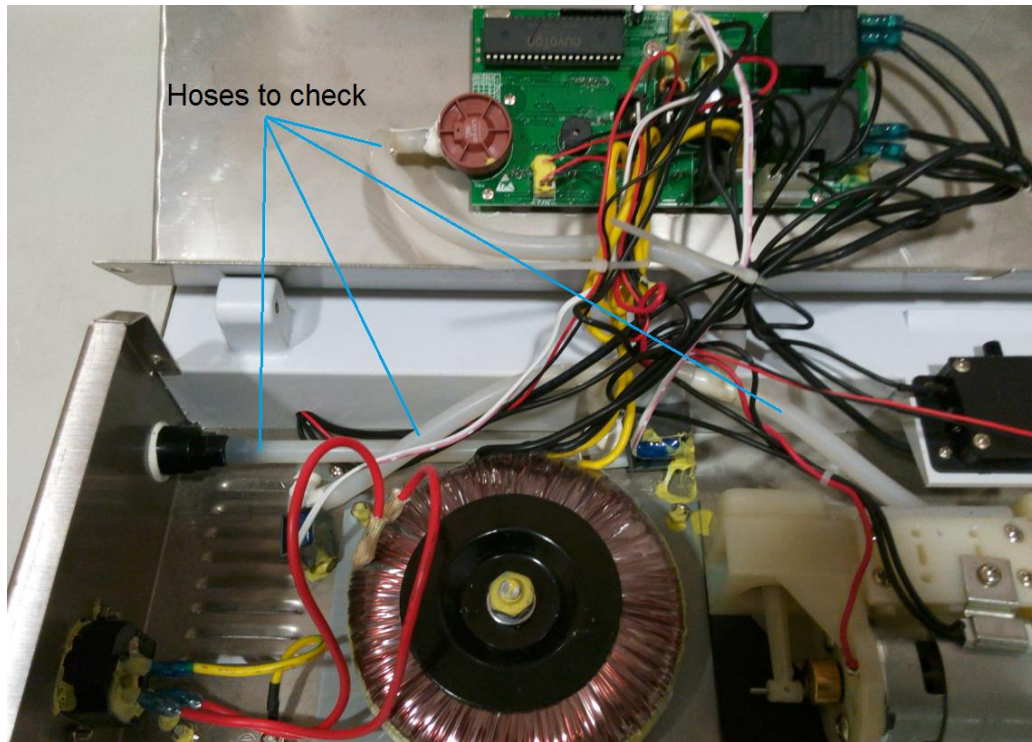


If all hoses are intact the small valve circled below may need to be checked

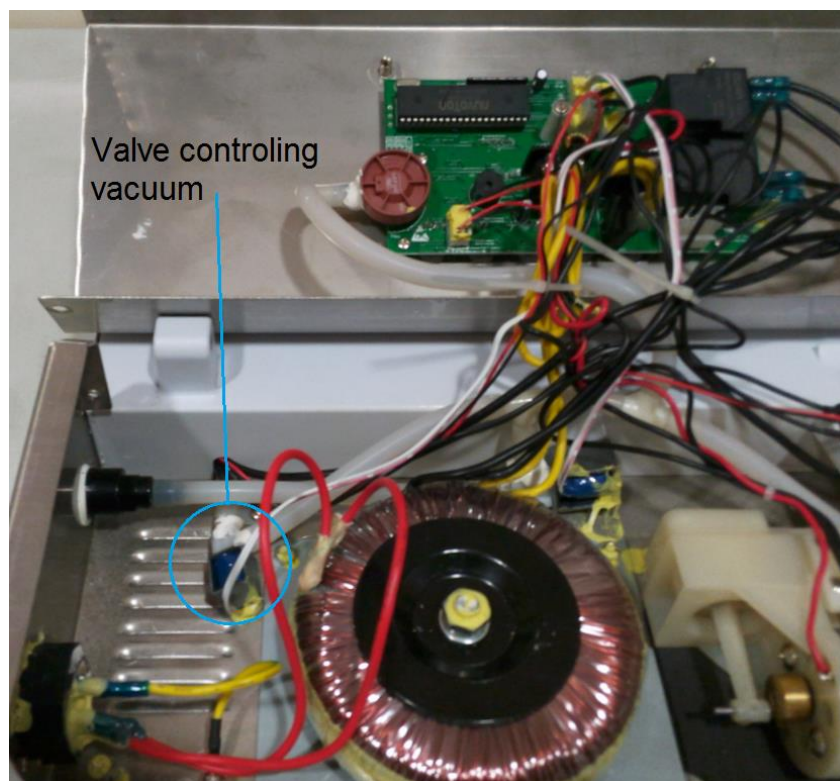

If the small valve needs to be replaced remove hoses indicated below

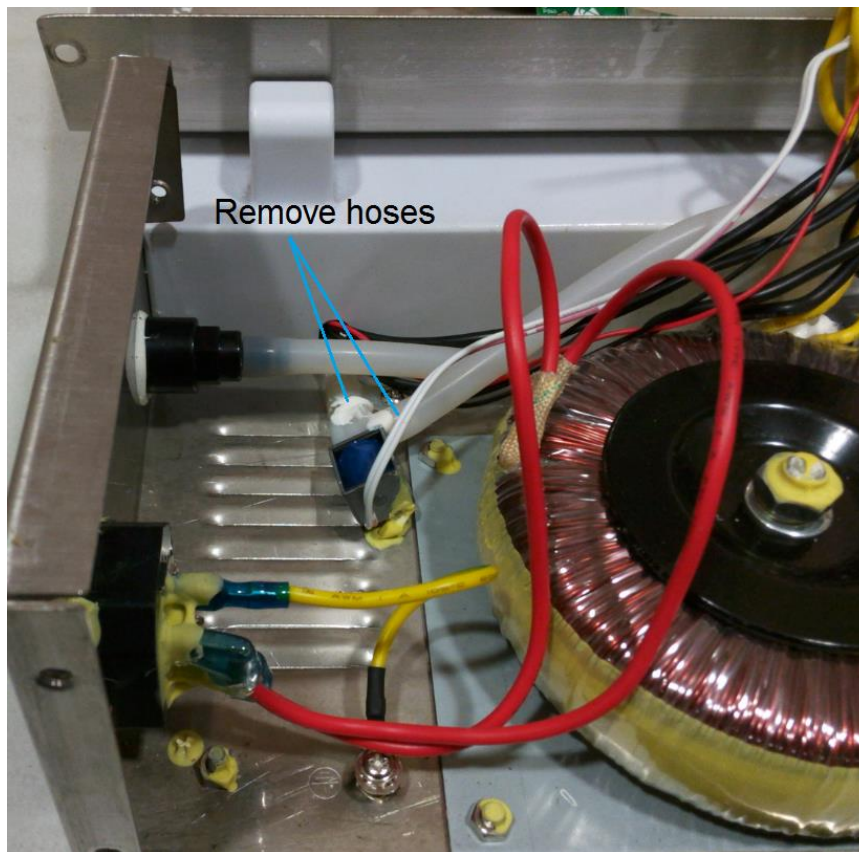


Remove connector indicated on control board.

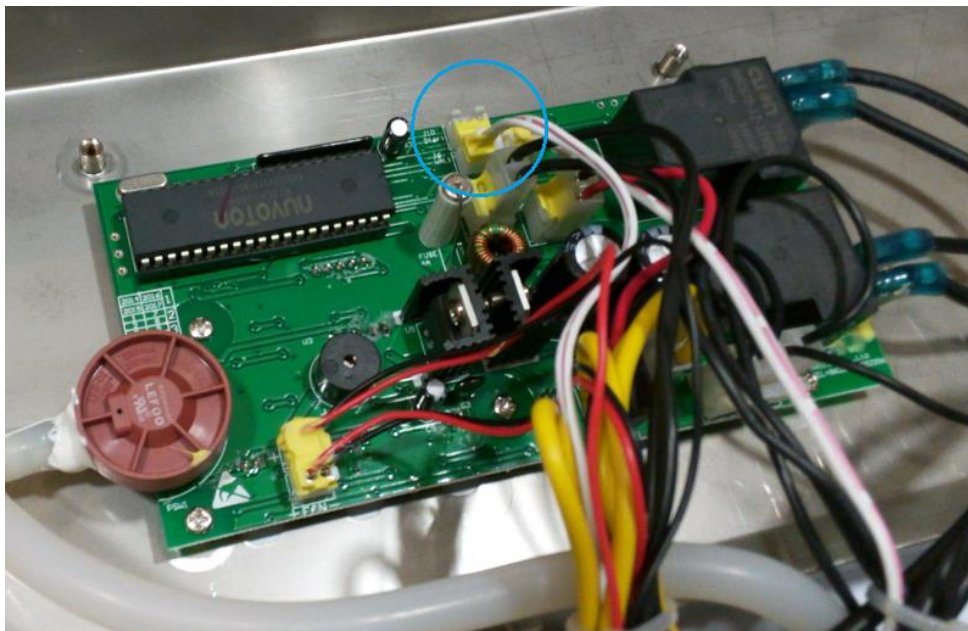

Replace the small valve and follow above steps to re-assemble vacuum sealer.

In emergency cases if the machine is required to be used urgently the small valve may be cleaned out as below:

Remove the 2 Phillips Head screws:

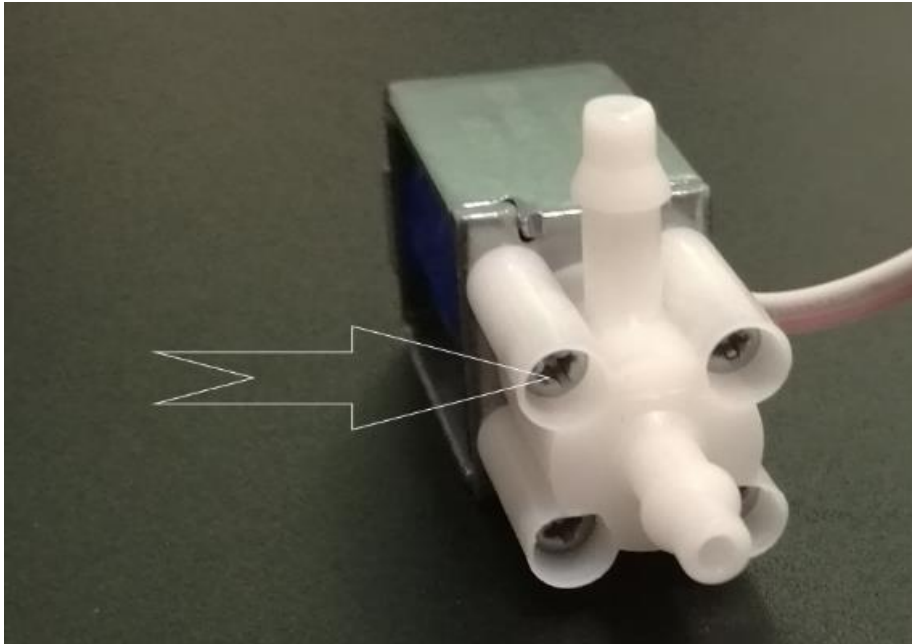


Wipe down / clean and then lubricate with CRC or WD40: (Don't use silicon spray it may swell the seals)

A: Cavity

B: Spring

C: Rod

Then re-install.

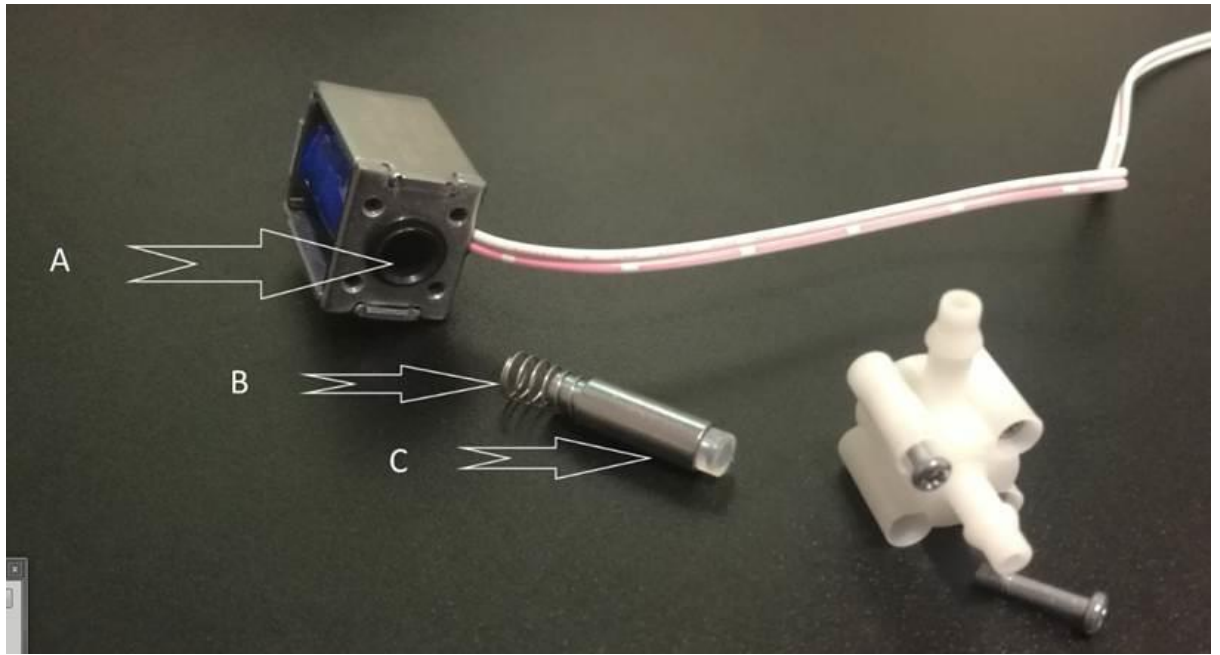

All parts are available by contacting Pac Food:

Phone: 1800 823 200

Email: info@pacfood.com.au